 


# Universal Remote Control

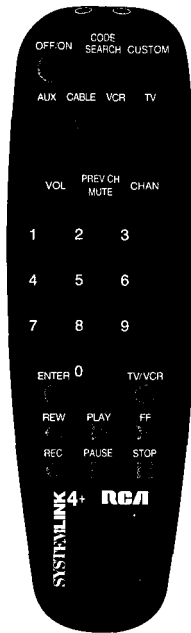

This Universal Remote Control is compatible with most models of infrared controlled Televisions, VCRs and Cable Boxes manufactured after 1984. Please retain this guide for future reference.

## TABLE OF CONTENTS

|  |             |
|--|-------------|
| Button Description .....               | 2           |
| Setting Up Your Universal Remote ..... | 2           |
| Programming Your Universal Remote      |             |
| Code Search .....                      | 3           |
| Code Lists .....                       | 4           |
| Operating a TV .....                   | 5           |
| Operating a Cable Box .....            | 5           |
| Custom TV Features .....               | 6           |
| Operating A VCR .....                  | 7           |
| Operating A TV/VCR Combo .....         | 8           |
| Special Operations .....               | 8           |
| Code Lists                             |             |
| TV .....                               | 9           |
| VCR .....                              | 10          |
| Cable Box .....                        | 11          |
| TV/VCR Combinations .....              | 11          |
| Warranty .....                         | Center Card |

# Button Description

## Code Search Button

 
Programs devices by searching through brand codes. Use when code lists are not available or when the listed code does not work with your device. *See page 3.*

## Channel and Sound (VOL, PREV CH, MUTE, CHAN, ENTER)

Use these buttons to control sound and channel changes.

## VCR Buttons

(TV/VCR, REW, PLAY, FF, REC, PAUSE, STOP)  
Use these buttons to control tape playback from a VCR and to record.

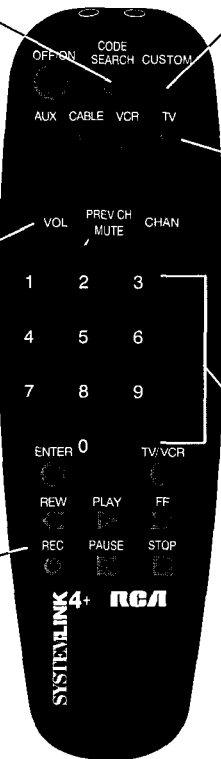

## Custom TV Button

Sets the remote to bring up favorite channels programmed for a number button. *See page 6.*

## Device Buttons

(AUX, CABLE, VCR, TV)  
Determines which device you are controlling. Buttons light to show which device is selected. (AUX can be set to control a second Cable Box, VCR or TV).

 
## Number Buttons

(0-9)  
Use these buttons to directly enter channel numbers for a TV, VCR and Cable Box. Also used for entering program code numbers from brand lists and when programming and using Custom TV feature.

# Setting Up Your Universal Remote

## Place Batteries in the remote


1. Remove the battery compartment cover.
2. Place four AAA batteries as shown, matching the + and - end of each battery as indicated in the battery compartment.
3. Replace the cover.

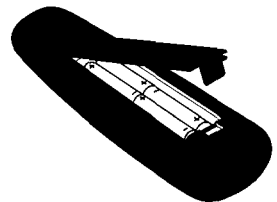

## Determine if your remote needs programming

*Some RCA, GE and ProScan devices may already be pre-programmed.*

 1. Press the button of the device you want to control (for example TV).
2. If the device turns on, press another button, to confirm (for example CHANNEL UP).
3. If the device you selected (TV) responds, you will not need to program the remote. If the device you selected (TV) does not respond, you will need to program the remote. (See pages 3-4 for programming instructions).
4. Repeat steps 1-3 for other devices.

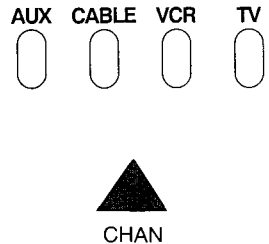


# Programming Your Universal Remote

The remote may already be set up to operate your brand of TV, VCR, or Cable Box. It is pre-programmed with the following codes: TV-000, VCR-000, Cable Box-000 and AUX is programmed with VCR code 037. For brands that require programming, there are two ways to program: Using Code Lists or Code Search. Use Code Search if the code lists are not available or if the codes from the lists do not operate a device.

## Programming a Device using **CODE SEARCH**


 
1. Manually turn on your device (TV, VCR, Cable Box).
2. Press and hold **CODE SEARCH**.
3. Press and release the device button you want to set up (TV, VCR, or CABLE). However, if you are using AUX for a device, press and release AUX first and then the device button for the type of device to be programmed (TV, VCR, or CABLE). The selected device button will flash once.
4. Release **CODE SEARCH**.
5. Press **OFF/ON** repeatedly until the device turns off (you may have to press up to 100 times at a rate of once per second).
6. Once the device turns off, press and release **ENTER**.
7. With the device on, press another button, for example **CHANNEL UP**. If the device responds, no further programming is required. If the device does not respond, repeat steps 1-7.



# Programming Your Universal Remote


## Programming a Device using the Code Lists

  1. Find codes for each device and brand on page numbers shown below.
2. Press and hold **CODE SEARCH**.
3. Press and release the **TV, VCR, or CABLE** button you want to set up. If programming **AUX** for a device, press and release **AUX** first and then the device to be programmed (TV, VCR, Cable Box). When the selected device button flashes proceed to the next step.

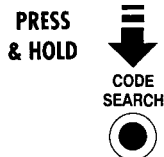

4. Enter the three digit code from the TV, VCR or Cable Box code list.

| <u>Device</u> | <u>Page</u> |
|---------------|-------------|
| TV            | 9           |
| VCR           | 10          |
| Cable Box     | 11          |

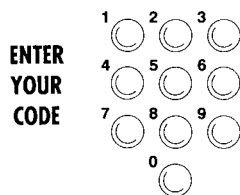 

5. Release **CODE SEARCH**.



6. With the device on, press another button, for example **CHANNEL UP**. If the device responds, no further programming is required. If the device does not respond, repeat 2-5 using another code.



7. Enter your device codes here for easy reference.

| TV CODE |  |  |
|---------|--|--|
|         |  |  |

| CABLE BOX CODE |  |  |
|----------------|--|--|
|                |  |  |


| VCR CODE |  |  |
|----------|--|--|
|          |  |  |

| AUX CODE |  |  |
|----------|--|--|
|          |  |  |

# Operating A TV
 
## Turning the TV On and Off.

1. Press **TV** to set the remote to control the TV (Most RCA, GE and ProScan models will only turn on when TV is pressed, not **OFF/ON**).



2. Press **OFF/ON** to turn the TV on or off.

OFF/ON



## Change Channels on the TV

 
Press **CHANNEL UP** or **CHANNEL DOWN** to change channels on the TV or enter the channels as you would normally for your TV.



# Operating A Cable Box

## Turning the Cable Box On and Off.

1. Point the remote at the cable box and press **CABLE**.



2. Press **OFF/ON** to turn it on or off.

OFF/ON



## Changing Channels on the Cable Box.

Press **CHANNEL UP** or **DOWN** to change channels on the cable box or enter the channel as you would normally for your cable box.



# Custom TV (Systemlink Exclusive)

 
The **CUSTOM** button allows you to store 10 of your favorite TV channels in memory. You can access these channels using the remote's number buttons. Follow the steps below to program channels to each of the number buttons.

## Programming the Custom Button

1. Press and hold **CUSTOM**.



2. Press the number (0-9) you want to use to bring up the custom channel. For example, if you want to program channel 12 to the number 1 button, press 1.

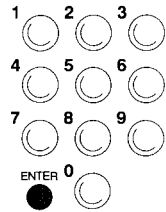

3. Enter the channel number as you would normally. Up to three buttons may be pressed, including the **ENTER** button.

4. Release **CUSTOM**. The Custom button will flash once if programming was successful. If it does not flash, it was not programmed. Try again.




5. Repeat steps 1-4 for each additional channel.

## Using the CUSTOM feature

 1. Press and release **CUSTOM**.



2. Press a number button to bring up the Custom channel programmed. Custom will flash if the button has been previously programmed. There will be a slight delay as channels change, so be sure to hold the number button down until the channel changes.

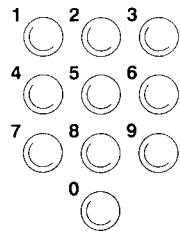


3. The **CHANNEL UP** or **DOWN** keys can now be used to cycle through all programmed number buttons while in the Custom mode.



## To Turn off the Custom Feature.

 
Press any device button (**TV**, **VCR**, **CABLE**, **AUX**) to exit the remote from the Custom mode and place it in normal operating mode.



# Operating A VCR

## Turn the VCR On and Off.

 1. Press **VCR** to set the remote to control the VCR. (Most RCA, GE and ProScan models will only turn on when pressing VCR not OFF/ON).
2. Press **OFF/ON** to turn the VCR on or off.



OFF/ON



## Watch a tape in your VCR.

1. Turn on the VCR.
2. Insert a tape in the VCR.
3. Press **PLAY** to start the tape.
4. Press **STOP** when you are finished.
5. Press **REW** to rewind the tape.
6. Press **PAUSE** to pause the tape.

PLAY



STOP



REW

 
 


PAUSE



## Record one channel and watch another.


1. Press **VCR** to set the remote to control the VCR. If you programmed AUX for a VCR, press **AUX**.
2. Tune the VCR to the channel you want to record.
3. Press **REC** to start recording.
4. Press **TV/VCR**.
5. Press **TV** to set the remote to control the TV.
6. Press **CHANNEL UP** or **DOWN** to change channels on the TV.
7. To see the channel you are recording, tune the TV to channel 3 or 4 (same as CH3/4 switch on the VCR).

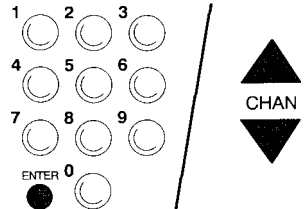

REC



 TV/VCR



## Operating A TV/VCR Combo Unit

Some TV/VCR combination units may be controlled by using a combination of TV and VCR codes. For example, the Samsung TV/VCR combo unit may be controlled by both the Samsung TV code and the Samsung VCR code.

## Special Operations

### RCA, GE and PROSCAN Brand Devices:

Many of these devices (TVs and VCRs) will not need to be programmed. In the event that programming is required, the code search method is suggested.

Note: With these brands, the device button (TV, VCR) will usually turn the units on. The OFF/ON button will only turn these devices off.

### SCIENTIFIC ATLANTIC Cable Boxes:

This brand of cable box can be programmed using the code search method by using the **CHANNEL UP** key rather than **OFF/ON** during Code Search. NOTE: The device must be turned on prior to beginning the code search. Once the device turns off, press and release **ENTER**. In most cases this cable box can be turned on and off using the **CHANNEL UP** key not the **OFF/ON** button. If the unit will not turn on using the **CHANNEL UP** key, then manually turn it on and only partial compatibility will be achieved.

### JERROLD or GENERAL INSTRUMENTS Cable Boxes:

These units can be programmed using the code search method. In some cases, these devices will change channels during the code search. Continue until the unit turns off, then press and release **ENTER**.

### ZENITH and OAK Cable Boxes:

Some Zenith and Oak Cable Boxes require pressing **CHANNEL DOWN** rather than **ENTER** after numeric entry.

### Low Battery Warning

When your batteries are weak, the device keys will light sequentially indicating it is time to change batteries.



# TV Code List

|                     |   |                  |   |
|---------------------|---|------------------|---|
| Admiral.....        | 005   | MTC.....         | 011,019,027   |
| Amtron.....         | 064   | Multivision..... | 081   |
| Akai.....           | 002   | NAD.....         | 018,023   |
| Anam National.....  | 038   | NEC.....         | 011,014,019,027,038   |
| AOC.....            | 011,019,027,088   | Panasonic.....   | 012,013,038,086   |
| Bell & Howell.....  | 005   | Penney.....      | 000,008,011,019,027,068,086   |
| Candle.....         | 011,027,033   | Philco.....      | 006,007,010,011,013,016,019,<br>027,033,035,037,038,043,087,089                             |
| Citizen.....        | 011,027,033,064   | Philips.....     | 006,007,010,011,013,016,033,<br>035,037,038,043,066,073                                     |
| Colortyme.....      | 011,027,084   | Pioneer.....     | 011,027,045,062,093   |
| Concerto.....       | 011,027   | Portland.....    | 011,019,027   |
| Contec/Cony.....    | 036,037,040,042,064   | ProScan.....     | 000   |
| Craig.....          | 064   | Proton.....      | 011,027,037,072   |
| Curtis Mathes.....  | 000,011,015,027   | Quaser.....      | 012,038,092   |
| CXC.....            | 064   | Radio Shack..... | 000,021,025,036,<br>037,059,064   |
| Daewoo.....         | 011,019,027   | RCA.....         | 000,006,011,019,027,<br>034,038,044,046,088   |
| Daytron.....        | 011,027   | Realistic.....   | 021   |
| Dimensia.....       | 000   | Sampo.....       | 011,027   |
| Electrohome.....    | 006,011,014,027,038,<br>061,068   | Samsung.....     | 006,011,014,015,<br>019,027,036,037,077   |
| Emerson.....        | 011,026,027,028,029,030,<br>031,032,037,042,053,064,<br>065,067,075,076,079 | Sanyo.....       | 017,021,039,056,057,058   |
| Envision.....       | 011,027   | Scott.....       | 028,037,064   |
| Fisher.....         | 017,021,039,041   | Sears.....       | 000,006,011,014,017,018,021,<br>023,027,039,040,041,051,071,083                             |
| Funai.....          | 064   | Sharp.....       | 011,020,025,027,037,<br>052,053,059,060   |
| GE.....             | 000,008,009,011,012,027,<br>038,068,086,089,091                             | Signature.....   | 005,094   |
| Goldstar.....       | 003,004,006,011,019,<br>027,037,050   | Sony.....        | 002   |
| Hallmark.....       | 011,027   | Soundesign.....  | 011,027,033   |
| Hitachi.....        | 009,011,027,036,037,<br>040,047,048,063,080                                 | Sylvania.....    | 006,007,010,011,013,016,027,<br>033,035,043,049,066,087,089                                 |
| Infinity.....       | 013   | Symphonic.....   | 064,076   |
| JBL.....            | 013   | Tatung.....      | 038   |
| Jensen.....         | 011,027   | Technics.....    | 012   |
| JVC.....            | 012,024,036,037,040,048,051,074   | Techwood.....    | 011,027   |
| Kawasho.....        | 002,011,027   | Teknika.....     | 011,019,027,033,037,040,066   |
| Kenwood.....        | 006,011,014,027   | Telecaption..... | 090   |
| Kloss Novabeam..... | 035,043   | TMK.....         | 011,027   |
| KTV.....            | 078   | Toshiba.....     | 018,021,023,071,085,090   |
| Loewe.....          | 013   | Universal.....   | 008,009   |
| Luxman.....         | 011,027   | Victor.....      | 051   |
| LXI.....            | 000,013,018,021,023,054   | Vidtech.....     | 019,027   |
| Magnavox.....       | 006,007,010,011,013,016,<br>027,033,035,043,066,087,089                     | Wards.....       | 000,005,006,007,008,<br>009,010,011,013,019,<br>025,027,028,035,043,<br>059,066,076,082,089 |
| Marants.....        | 013   | Yamaha.....      | 006,014,019,027   |
| Marantz.....        | 011,013,027,069   | Zenith.....      | 001   |
| Memorex.....        | 005   |                  |   |
| MGA.....            | 006,011,014,019,022,<br>027,041,056,061,068                                 |                  |   |
| Mitsubishi.....     | 006,011,014,019,022,<br>027,041,055,056,061,068                             |                  |   |

# VCR Code List

|                      |   |                            |   |
|----------------------|---|----------------------------|---|
| Admiral.....         | 006   | Multitech.....             | 007,015,031,032                                     |
| Aiwa.....            | 015   | NEC.....                   | 002,014,016,030,<br>044,046,059,061,064             |
| Akai.....            | 003,017,022,023,063,066   | Panasonic.....             | 008,053   |
| Audio Dynamics.....  | 014,016   | Pentax.....                | 005,035,044   |
| Bell & Howell.....   | 002   | Pentex Research.....       | 046   |
| Broksonic.....       | 010   | Philco.....                | 008,029,053,056                                     |
| Candle.....          | 007,009,013,044,045,<br>046,052   | Philips.....               | 008,029   |
| Canon.....           | 008,053   | Pioneer.....               | 005,016,033,050                                     |
| Capehart.....        | 001   | Portland.....              | 044,045,052   |
| Citizen.....         | 007,009,013,044,045,<br>046,052   | ProScan.....               | 000   |
| Colortyme.....       | 014   | Quartz.....                | 002   |
| Craig.....           | 007,012   | Quasar.....                | 008,053   |
| Curtis-Mathes.....   | 000,007,008,014,<br>015,044,046,053,064,067   | RCA.....                   | 000,005,007,008,028,<br>035,037,054,069             |
| Daewoo.....          | 013,045,052   | Radio Shack/Realistic..... | 002,006,<br>008,009,012,015,<br>019,027,043,053     |
| dbx.....             | 014,016   | Samsung.....               | 007,013,022,032,042                                 |
| Dimensia.....        | 000   | Sansui.....                | 016,071   |
| Dynatech.....        | 015   | Sanyo.....                 | 002,012   |
| Electrohome.....     | 027   | Scott.....                 | 004,013,041,049,068                                 |
| Emerson.....         | 008,009,010,013,015,<br>020,023,027,034,041,<br>042,047,057,062,065,<br>067,068,070 | Sears.....                 | 002,005,009,012,018,<br>019,035,043,048             |
| Fisher.....          | 002,012,018,019,<br>043,048,058   | Sharp.....                 | 006,024,027,039,045                                 |
| Funai.....           | 015   | Shintom.....               | 017,026,031,035                                     |
| GE.....              | 000,007,008,032,053   | Signature.....             | 015   |
| Goldstar.....        | 009,014,046,060   | Sony.....                  | 017,026,038   |
| Harman Kardon.....   | 014   | Sylvania.....              | 008,015,029,053,056                                 |
| Hitachi.....         | 005,015,035,036   | Symphonic.....             | 015   |
| Instant Replay.....  | 008   | Tandy.....                 | 002,015   |
| JCL.....             | 008   | Tashiko.....               | 009   |
| JC Penney.....       | 002,005,007,008,014,<br>016,030,035,051,053   | Tatung.....                | 030   |
| JVC.....             | 002,014,016,030,046   | Teac.....                  | 015,030,069   |
| Kenwood.....         | 002,014,016,<br>030,044,046   | Technics.....              | 008   |
| Lloyd.....           | 015   | Teknika.....               | 008,009,015,021                                     |
| Logik.....           | 031   | Toshiba.....               | 005,013,019,048,049                                 |
| Magnavox.....        | 008,029,053,056   | Totevision.....            | 007,009   |
| Marantz.....         | 002,008,014,016,029,<br>030,044,046,061   | TMK.....                   | 067   |
| Marta.....           | 009   | Unitech.....               | 007   |
| MEI.....             | 008   | Vector Research.....       | 014,016,044   |
| Memorex.....         | 008,009,012,015   | Victor.....                | 016   |
| MGA.....             | 004,027   | Video Concepts.....        | 014,016,044   |
| Midland.....         | 032   | Videosonic.....            | 007   |
| Minolta.....         | 005,035   | Wards.....                 | 005,006,007,008,009,012,<br>013,015,025,027,031,035 |
| Mitsubishi.....      | 004,005,027,035,040   | Yamaha.....                | 002,014,016,030,046                                 |
| Montgomery Ward..... | 006   | Zenith.....                | 011,017,026   |
| MTC.....             | 007,015   |                            |   |

## Cable Box Code List

|                           |   |                      |   |
|---------------------------|---|----------------------|---|
| ABC .....                 | 022,046,053,054                                 | Pioneer .....        | 018,020,044                                     |
| Anvision .....            | 007,008   | RCA .....            | 000,027   |
| Cablestar .....           | 007,008   | Randtek .....        | 007,008   |
| Diamond .....             | 056   | Regal .....          | 003,012,013                                     |
| Eagle .....               | 007,008   | Regency .....        | 002,033   |
| Eastern Int. ....         | 002   | Samsung .....        | 044   |
| General Instrument* ..... | 046   | Sci. Atlanta * ..... | 003,022,025                                     |
| GI 400* .....             | 004,005,015,023,<br>024,025,030,036             | Signature .....      | 046   |
| Hamlin .....              | 003,012,013,034,048                             | Sprucer .....        | 027   |
| Hitachi .....             | 037,043,046                                     | Starcom .....        | 046   |
| Jerrold* .....            | 004,005,015,023,024,025,<br>030,036,045,046,047 | Stargate 2000 .....  | 058   |
| Macom .....               | 037,043   | Sylvania .....       | 011,059   |
| Magnavox .....            | 007,008,019,021,026,028,<br>029,032,033,040,041 | Teknika .....        | 006   |
| NSC .....                 | 009   | Texscan .....        | 010,011,059                                     |
| Oak* .....                | 001,016,038                                     | Tocom .....          | 017,021,049,050,055                             |
| Oak Sigma .....           | 016   | Unika .....          | 031,032,041                                     |
| Panasonic .....           | 003,027,039                                     | Universal .....      | 051,052   |
| Philips .....             | 007,008,019,021,026,028,<br>029,032,033,040,041 | Viewstar .....       | 007,008,019,021,026,028,<br>029,032,033,040,041 |
|                           |   | Warner Amex .....    | 044   |
|                           |   | Zenith* .....        | 014,042,057                                     |

## TV/VCR Combinations

Use TV or VCR codes listed for your brand to operate your TV/VCR combo unit.

\* See special notes on page 8.

# RCA

Universal

# Remote

## It Consolidates

### ▼ LIGHTED DEVICE KEYS:

Shows you what device is being operated ... even in the dark.

### ▼ CUSTOM TV:

Preset up to 10 of your favorite stations. Quickly access stations you watch most by pressing a number key.

### ▼ TRANSMIT/LOW BATTERY WARNING LIGHTS:

The lights show the remote is working and flash when it's time to change batteries.

### ▼ CODE SEARCH:

Scans the entire code library to find the right code for your TV, VCR, or Cable Box at the touch of a button.

### ▼ CODE SAVER:

Holds a charge and saves your codes while you change batteries.

### ▼ TOLL-FREE CONSUMER HELPLINE:

A customer service representative is ready to help with questions. See the instruction book for details.

Requires Four (4) AAA Batteries (Not Included)



**THIS SYSTEMLINK™ 4+ REMOTE CONTROL IS COMPATIBLE WITH MOST MODELS OF THE FOLLOWING BRANDS**  
(with infrared controlled components manufactured after 1984):

### TV

|               |                |             |             |
|---------------|----------------|-------------|-------------|
| Admiral       | GE             | Mitsubishi  | Scott       |
| Akai          | Goldstar       | Montgomery  | Sears       |
| Amtron        | Hallmark       | Ward        | Sharp       |
| Anam National | Hitachi        | MTC         | Sony        |
| AOC           | Infinity       | Multivision | Soundesign  |
| Bell & Howell | JBL            | NAD         | Sylvania    |
| Candle        | JCPenney       | NEC         | * Symphonic |
| Citizen       | Jensen         | * Panasonic | Tatung      |
| Colortyme     | JVC            | Philco      | Technics    |
| Concerto      | Kawasho        | Philips     | Techwood    |
| Contec/Cony   | Kenwood        | Pioneer     | Teknika     |
| Craig         | Kloss Novabeam | Portland    | Telecaption |
| Curtis Mathes | KTV            | ProScan     | TMK         |
| CXC           | Loewe          | Proton      | Toshiba     |
| Daewoo        | Luxman         | Quasar      | Universal   |
| Daytron       | LXI            | Radio Shack | Victor      |
| Electrohome   | * Magnavox     | RCA         | Vidtech     |
| Emerson       | Marantz        | Realistic   | Wards       |
| Envision      | Megatron       | Sampo       | Yamaha      |
| Fisher        | Memorex        | * Samsung   | Zenith      |
| Funai         | MGA            | Sanyo       |             |

### VCR

|                |                |             |                 |
|----------------|----------------|-------------|-----------------|
| Admiral        | Goldstar       | MTC         | Sharp           |
| Aiwa           | Harman         | Multitech   | Shintom         |
| Akai           | Kardon         | NEC         | Sony            |
| Audio Dynamics | Hitachi        | * Panasonic | Sylvania        |
| Bell & Howell  | Instant Replay | Pentax      | * Symphonic     |
| Broksonic      | JCL            | Pentax-     | Tandy           |
| Candle         | JCPenney       | Research +  | Tashiko         |
| Canon          | JVC/Victor     | Philco      | Tatung          |
| Capehart       | Kenwood        | Philips     | Teac            |
| Citizen        | Lloyd          | Pioneer     | Technics        |
| Colortyme      | Logic          | Portland    | Teknika         |
| Craig*         | Magnavox       | ProScan     | TMK             |
| Curtis Mathes  | Marantz        | Quartz      | Toshiba         |
| Daewoo         | Marta          | Quasar      | Totevision      |
| dbx            | MEI            | Radio Shack | Unitech         |
| Dimensia       | Memorex        | RCA         | Vector Research |
| Dynatech       | MGA            | Realistic   | Victor          |
| Electrohome    | Midland        | * Samsung   | Video Concepts  |
| Emerson        | Minolta        | Sansui      | Videasonic      |
| Fisher         | Mitsubishi     | Sanyo       | Wards           |
| Funai          | Montgomery     | Scott       | Yamaha          |
| GE             | Ward           | Sears       | Zenith          |

### Cable Box

|              |           |               |             |
|--------------|-----------|---------------|-------------|
| ABC          | Hitachi   | RCA           | Sylvania    |
| Anvision     | Jerrold   | Randtek       | Teknika     |
| Cablestar    | Macom     | Regal         | Texscan     |
| Diamond      | Magnavox  | Regency       | Tocom       |
| Eagle        | NSC       | Samsung       | Unika       |
| Eastern Int. | Oak       | Sci. Atlanta  | Universal   |
| General      | Oak Sigma | Signature     | Viewstar    |
| Instruments  | Panasonic | Sprucer       | Warner Amex |
| GI 400       | Philips   | Starcom       | Zenith      |
| Hamlin       | Pioneer   | Stargate 2000 |             |

\* Also works TV/VCR combinations

© 1994 Thomson Consumer Electronics, Inc.  
2000 Clements Bridge Road  
Deptford, NJ 08096-2088  
Made in Mexico  
Printed and packaged in the USA

## RCU400